

Model/Sales Package: ABBREVIATIONS



Model ABBREVIATIONS

Description ABBREVIATIONS FOR AS400/EPIC

| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|--|
| 1 | 1 | - | ACCY | ACCESSORY |
| 3 | 1 | - | AHA | ADJUSTABLE HEAT ANTICIPATOR |
| 4 | 1 | - | AFS | AIRFOIL FAN SECTION |
| 5 | 1 | - | APS | AIR PRESSURE SWITCH |
| 6 | 1 | - | AHU | AIR HANDLING UNIT |
| 7 | 1 | - | ALM | ALARM |
| 8 | 1 | - | AUX OUT | AUXILLARY OUT |
| 9 | 1 | - | AFS | AIR FLOW SWITCH |
| 10 | 1 | - | CADM | COMFORT ALERT-DIAGNOSTIC MODULE |
| 11 | 1 | - | CIB | COMMUNICATION INTERFACE BOARD |
| 12 | 1 | - | CPM | COMPRESSOR PROTECTION MODULE |
| 13 | 1 | - | CFR | CONDENSER FAN RELAY |
| 14 | 1 | - | CNPI | CONDENSER PUMP INTERLOCK |
| 15 | 1 | - | CCH | CRANKCASE HEATER |
| 15A | 1 | - | CDFS | CONDENSER WATER FLOW SWTICH |
| 15B | 1 | - | CEWT | CONDENSER ENTERING WATER THERMISTOR |
| 15C | 1 | - | CLWT | CONDENSER LEAVING WATER THERMISTOR |
| 15D | 1 | - | CWFS | CHILLED WATER FLOW SWITCH |
| 16 | 1 | - | CLHR | COOLER HEATER RELAY |
| 17 | 1 | - | CSB | CURRENT SENSOR BOARD |
| 18 | 1 | - | AFCI | ARC FAULT CIRCUIT INTERRUPTER |
| 19 | 1 | - | BAROREL | BAROMETRIC RELIEF |
| 20 | 1 | - | BP | BUILDING PRESSURE |
| 21 | 1 | - | BR | BURNER RELAY |
| 22 | 1 | - | BTU | BRITISH THERMO UNIT(MEASUREMENT OF HEAT) |
| 22A | 1 | - | BU-LS | BACKUP LIMIT SWITCH |
| 23 | 1 | - | C | CONTACTOR |
| 24 | 1 | - | CAP | CAPACITOR |
| 25 | 1 | - | CB | CIRCUIT BREAKER |
| 26 | 1 | - | CC | COMPRESSOR CONTACTOR |
| 27 | 1 | - | CCP | COMFORTLINK COMPRESSOR PROTECTION |
| 27A | 1 | - | CCPR | CAPACITY CONTROL PRESSURE RELAY |
| 27B | 1 | - | CCPS | CAPACITY CONTROL PRESSURE SWITCH |
| 28 | 1 | - | CCB | CONTROL CIRCUIT BREAKER |
| 29 | 1 | - | CLO | COMPRESSOR LOCKOUT(KEEPS COMPR.FROM STAR |
| 30 | 1 | - | COFS | CONDESATE OVERFLOW SWITCH |
| 31 | 1 | - | CCN | CARRIER CUMMUNICATION NETWORK |
| 32 | 1 | - | CEM | CONTROLS EXPANSION MODULE |
| 33 | 1 | - | CFM | CUBIC FEET PER MIN.(REFERS TO AIR DEL.) |
| 33A | 1 | - | CRN | CANADIAN COOLER |
| 34 | 1 | - | CV | CONSTANT VOLUME(AIR FLOW DEL. AT 1 CFM) |
| 35 | 1 | - | CWFS | CHILLED WATER FLOW SWITCH |
| 36 | 1 | - | CH | COOLER HEATER |
| 37 | 1 | - | CHC | COOLER/PUMP HEATER CONTACTOR |
| 38 | 1 | - | CCHR | CRANKCASE HEATER RELAY |
| 39 | 1 | - | CCHS | CRANKCASE HEATER SWITCH |
| 40 | 1 | - | CCHTS | CRANKCASE HEATER TEMP SWITCH |
| 41 | 1 | - | CLV | COOLING LIQUID VALVE |
| 42 | 1 | - | CM | CONTROL MODULE |
| 43 | 1 | - | CNFS | CONDENSER FLOW SWITCH |
| 44 | 1 | - | CNP | CONDENSER PUMP |
| 45 | 1 | - | CLSASP | COOLING SUPPLY AIR SET POINT |
| 46 | 1 | - | COMM | COMMUNICATIONS |
| 47 | 1 | - | COMP | COMPRESSOR |
| 48 | 1 | - | COM | COMMON |
| 49 | 1 | - | COR | CO2 OVERRIDE RELAY |

Model/Sales Package: ABBREVIATIONS



| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|---|
| 50 | 1 | - | CPCS | COMPRESSOR PROTECTION BOARD |
| 51 | 1 | - | COMPTR | COMPRESSOR MOTOR |
| 52 | 1 | - | CR | CONTROL RELAY |
| 53 | 1 | - | CS | COMPRESSOR SAFETY |
| 54 | 1 | - | CRC | COOLING-REHEAT CONTROL |
| 55 | 1 | - | CSC | COMPRESSOR STAGING BOARD |
| 56 | 1 | - | CTB | CENTRAL TERMINAL BOARD |
| 57 | 1 | - | CU-NI | CUPRO-NICKEL |
| 57A | 1 | - | CVNTL | CONVENTIONAL |
| 58 | 1 | - | CWP | CHILLED WATER PUMP |
| 59 | 1 | - | CWPI | CHILLED WATER INTELOCK |
| 60 | 1 | - | D | DIODE |
| 61 | 1 | - | DAI | DEFROST ACTIVE INDICATOR |
| 62 | 1 | - | DAT | DISCHARGE AIR THERMISTER |
| 62A | 1 | - | DB | DEFROST BOARD |
| 63 | 1 | - | DDC | DIRECT DIGITAL CONTROL |
| 64 | 1 | - | DFS | DEFROST SWITCH |
| 65 | 1 | - | DFT | DEFROST THERMOSTAT |
| 66 | 1 | - | DGT | DISCHARGE GAS THERMISTOR |
| 67 | 1 | - | DM | DAMPER MOTOR |
| 68 | 1 | - | DMC | DAMPER MOTOR SWITCH |
| 69 | 1 | - | DHR | DEHUMIDIFY RELAY |
| 70 | 1 | - | DP | DUCT PRESSURE |
| 71 | 1 | - | DPT | DUCT PRESSURE TRANSDUCER |
| 72 | 1 | - | DPS | DIFFERENTIAL PRESSURE SWITCH |
| 73 | 1 | - | DS | DISCONNECT SWITCH |
| 74 | 1 | - | DSIOLV | DISCRETE STD.INPUT/PUTPUT MODULE(LOW VOL |
| 75 | 1 | - | DUS | DIGITAL UNLOADER SOLENOID |
| 76 | 1 | - | DSIO | DISCRETE STANDARD INPUT/OUTPUT MODULE |
| 77 | 1 | - | DSIOEXV | DISCRETE STD.INPUT/OUTPUT MODULE(EXV) |
| 78 | 1 | - | DSV | DISCHARGE SOLENOID VALVE |
| 79 | 1 | - | DTT | DISCHAGE TEMPERATURE THERMISTOR |
| 80 | 1 | - | DU | DUMMY TERMINAL |
| 81 | 1 | - | DX | DIRECT EXPANSION(MEANS USING REFRIGERANT |
| 82 | 1 | - | EAC | ELECTRONIC AIR CLEANER |
| 83 | 1 | - | EAT | ENTERING AIR TEMPERATURE |
| 84 | 1 | - | EC | ENTHALPY CONTROL |
| 85 | 1 | - | ECB | ECONOMIZER CONTROL BOARD |
| 86 | 1 | - | ECM | ELECTRONICALLY COMMUTATED MOTOR |
| 87 | 1 | - | ECON | ECONOMIZER |
| 88 | 1 | - | ECR | ECONOMIZER CLOSED RELAY |
| 89 | 1 | - | EDM | ECONOMIZER DAMPER MOTOR |
| 90 | 1 | - | EDT | EVAPORATOR DISCHARGE SENSOR |
| 91 | 1 | - | EHR | ELECTRIC HEAT RELAY |
| 92 | 1 | - | EMM | ENERGY MANAGEMENT BOARD |
| 93 | 1 | - | ENRV | EXTERNAL NON-REVERSING VALVE |
| 94 | 1 | - | EOR | ECONOMIZER OPEN RELAY |
| 95 | 1 | - | EPT | ECONOMIZER PRESSURE TRANSDUCER |
| 96 | 1 | - | EQUIP | EQUIPMENT |
| 97 | 1 | - | ER | ECONOMIZER RELAY |
| 98 | 1 | - | ERV | ENERGY RECOVERY VENTILATOR |
| 99 | 1 | - | ESL | ENTHALPY SENSOR - LOW |
| 99A | 1 | - | SEE.NOTE | EPROM: EPROM = ERASABLE PROGRAMMABLE READ ONLY MEMORY. |
| 100 | 1 | - | EXV | ELECTRONIC EXPANSION VALVE(ELEC.SIGNAL) |
| 101 | 1 | - | EWT | ENTERING WATER |
| 102 | 1 | - | FB | FUSE BLOCK |
| 103 | 1 | - | FC | FAN CONTACTOR |
| 104 | 1 | - | FCB | FAN CIRCUIT BREAKER |

Model/Sales Package: ABBREVIATIONS



| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|---|
| 105 | 1 | - | FCPS | FAN CYCLING PRESSURE SWITCH |
| 106 | 1 | - | FCS | FAN CYCLING SWITCH |
| 107 | 1 | - | FIOP | FACTORY INSTALLED OPTION |
| 108 | 1 | - | FM | FAN MOTOR |
| 109 | 1 | - | FPM | FEET PER MINUTE |
| 110 | 1 | - | FPT | FREEZE PROTECTION THERMOSTAT |
| 111 | 1 | - | FPT | FEMALE PIPE THREAD |
| 112 | 1 | - | FS | FIELD SWITCH |
| 113 | 1 | - | FS | FLAME SENSOR |
| 114 | 1 | - | FS | FAN SWITCH |
| 115 | 1 | - | FU | FUSE |
| 116 | 1 | - | GCP | GROUND CURRENT PROTECTOR |
| 117 | 1 | - | GFI-CO | GROUND FAULT INTERRUPTER: (CONVENIENCE OUTLET)(C.O.) |
| 118 | 1 | - | GND | GROUND CONNECTION |
| 119 | 1 | - | GV | GAS VALVE |
| 120 | 1 | - | GVR | GAS VALVE RELAY |
| 121 | 1 | - | HC | HEATER CONTACTOR |
| 122 | 1 | - | HGBP | HOT GAS BYPASS |
| 123 | 1 | - | HGRH | HOT GAS REHEAT |
| 124 | 1 | - | HIR | HEAT INTERLOCK RELAY |
| 125 | 1 | - | HP | HEAT PUMP |
| 126 | 1 | - | HPS | HIGH PRESSURE SWITCH |
| 127 | 1 | - | HR | HEATER RELAY(PAC)/HOLDING RELAY(YAC) |
| 128 | 1 | - | HRV | HEAT RECOVERY VENTILATOR |
| 129 | 1 | - | HS | HALL EFFECT SENSOR |
| 130 | 1 | - | HOA | HAND/OFF/AUTO |
| 130K | 1 | - | HSCCR | HIGH SHORT CIRCUIT CURRENT RATING |
| 131 | 1 | - | HSI | HOT SURFACE IGNITION |
| 132 | 1 | - | HWG | HOT WATER GENERATOR |
| 133 | 1 | - | HT | HEATER THERMOSTAT |
| 134 | 1 | - | HTR | HEATER |
| 135 | 1 | - | HTSAST | HEATING SUPPLY AIR SET POINT |
| 136 | 1 | - | HUM | HUMIDISTAT |
| 137 | 1 | - | HUMR | HUMIDISTAT RELAY |
| 138 | 1 | - | HVAC/R | HEATIN, VENTILATION, AIR COND./REFRIG. |
| 139 | 1 | - | HSIO | HUMAN STANDARD INPUT/OUTPUT MODULE |
| 140 | 1 | - | I | IGNITOR, ELECTRODE |
| 141 | 1 | - | IAQ | INDOOR AIR QUALITY |
| 142 | 1 | - | IARH | INDOOR AIR RELATIVE HUMIDITY SENSOR |
| 143 | 1 | - | ICM | INTEGRAL(ELECTRONICALLY)COMMUTATED MOTOR |
| 144 | 1 | - | ICP | IGNITOR CONTROL PACK |
| 145 | 1 | - | ID | INDOOR |
| 146 | 1 | - | ID | INSIDE DIAMETER |
| 147 | 1 | - | IDM | INDUCED DRAFT MOTOR |
| 148 | 1 | - | IDR | INDUCED DRAFT RELAY |
| 148A | 1 | - | IFB | INDOOR FAN BOARD |
| 149 | 1 | - | IFC | INDOOR FAN CONTACTOR |
| 150 | 1 | - | IFCB | INDOOR FAN CIRCUIT BREAKER |
| 151 | 1 | - | IFM | INDOOR FAN MOTOR |
| 152 | 1 | - | IFR | INDOOR FAN RELAY |
| 153 | 1 | - | IFTB | INDOOR FAN TERMINAL BLOCK |
| 154 | 1 | - | IGC | INTEGRATED GAS CONTROL(CONTROLS GAS COMP |
| 154A | 1 | - | IPLV | INTEGRATED PART LOAD VALUE |
| 155 | 1 | - | ISC | INTEGRATED STAGING CONTROL |
| 156 | 1 | - | ISM | INTEGRATED STARTER MODULE |
| 157 | 1 | - | IGV | INLET GUIDE VANE |
| 158 | 1 | - | ILK | INTERLOCK SWITCH |
| 159 | 1 | - | IP | INTERNAL PROTECTION |

Model/Sales Package: ABBREVIATIONS



| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|--|
| 159A | 1 | - | INSTLD | INSTALLED |
| 159M | 1 | - | J.B. | JUNCTION BOX |
| 160 | 1 | - | L | LIGHT |
| 161 | 1 | - | LCS | LOSS OF CHARGE SWITCH |
| 162 | 1 | - | LA | LOW AMBIENT LOCKOUT |
| 163 | 1 | - | LAR | LOW AMBIENT RELAY |
| 164 | 1 | - | LAS | LOW AMBIENT SWITCH |
| 165 | 1 | - | LAT | LEAVING AIR TEMPERATURE |
| 166 | 1 | - | LBMB | LEI BACNET/MODBUS BOARD |
| 167 | 1 | - | LCDI | LEAKAGE CURRENT DETECTION & INTERRUPTION |
| 168 | 1 | - | LCS | LOSS-OF-CHARGE SWITCH |
| 169 | 1 | - | LDR | LOADER |
| 170 | 1 | - | LDV | LIQUID DIVERTER VALVE (3-WAY) |
| 171 | 1 | - | LEN | LOCAL EQUIP NETWORK |
| 172 | 1 | - | LGPS | LOW GAS PRESSURE SWITCH |
| 173 | 1 | - | LID | LOCAL INTERFACE DEVICE |
| 174 | 1 | - | LOC | LOSS OF CHARGE(SWITCH) |
| 175 | 1 | - | LON | LOCAL OPERATING NETWORK |
| 176 | 1 | - | LEI | LOCAL EQUIPMENT INTERFACE |
| 177 | 1 | - | LPS | LOW PRESSURE SWITCH |
| 178 | 1 | - | LPT | LOW PRESSURE TRANSDUCER |
| 179 | 1 | - | LS | LIMIT SWITCH |
| 180 | 1 | - | LS | LEVEL SWITCH |
| 181 | 1 | - | LSM | LIMIT SWITCH (MANUAL) |
| 182 | 1 | - | LSV | LIQUID SOLENOID VALVE |
| 183 | 1 | - | LTL | LESS THAN TRUCKLOAD (SHIPPING) |
| 184 | 1 | - | LTLO | LOW TEMPERATURE LOCKOUT |
| 185 | 1 | - | LWT | LEAVING WATER |
| 186 | 1 | - | LL | LIQUID LEVEL |
| 187 | 1 | - | LLS | LIQUID LEVEL SENSOR |
| 188 | 1 | - | LLSV | LIQUID LINE SOLENOID VALVE |
| 189 | 1 | - | LLSVR | LIQUID LINE SOLENOID VALVE RELAY |
| 190 | 1 | - | MARQ | SCROLLING MARQUEE DISPLAY |
| 191 | 1 | - | MAT | MIXED AIR THERMOSTAT |
| 192 | 1 | - | MBB | MAIN BASE BOARD |
| 193 | 1 | - | MCHX | MICRO-CHANNEL "NOVATION" COIL |
| 194 | 1 | - | MERV | MINIMUM EFFICIENCY REPORTING VALUE |
| 195 | 1 | - | MGV | MAIN GAS VALVE |
| 196 | 1 | - | MLC | MINIMUM LOAD CONTROL |
| 197 | 1 | - | MLV | MINIMUM LOAD VALVE |
| 198 | 1 | - | MMR | MOTOR MASTER RELAY |
| 199 | 1 | - | MMS | MOTOR MASTER SENSOR |
| 200 | 1 | - | MMV | MOTOR MASTER V CONTROLLER |
| 201 | 1 | - | MMC | MOTORMASTER CONTACTOR |
| 202 | 1 | - | MOCP | MAXIMUM OVERCURRENT PROTECTION |
| 203 | 1 | - | MOV | METAL OXIDE VARISTOR |
| 204 | 1 | - | MRT | MEDIUM ROOFTOP UNIT; TYPICALLY 12-25 TON |
| 205 | 1 | - | MTR | MOTOR |
| 206 | 1 | - | NC | NORMALLY CLOSED |
| 207 | 1 | - | NI | NOT ILLUSTRATED |
| 208 | 1 | - | NOX | NITROUS OXIDE(A BYPRODUCT OF BURNING GAS |
| 209 | 1 | - | NO | NORMALLY OPEN |
| 210 | 1 | - | NSS | NOT SOLD SEPARATELY |
| 211 | 1 | - | OARH | OUTDOOR AIR RELATIVE HUMIDITY SENSOR |
| 212 | 1 | - | OAT | OUTDOOR AIR THERMISTOR |
| 213 | 1 | - | OCT | OUTDOOR COIL THERMISTER |
| 214 | 1 | - | OD | OUTDOOR |
| 215 | 1 | - | OD | OUTSIDE DIAMETER |
| 216 | 1 | - | OFC | OUTDOOR FAN CONTACTOR |

Model/Sales Package: ABBREVIATIONS



| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|--|
| 217 | 1 | - | OFM | OUTDOOR FAN MOTOR |
| 218 | 1 | - | OST | OUTDOOR SUCTION THERMISTOR |
| 219 | 1 | - | OL | OVERLOAD |
| 220 | 1 | - | OLR | OVERLOAD RELAY |
| 221 | 1 | - | OLS | OIL LEVEL SWITCH |
| 222 | 1 | - | OMR | OCCUPIED MOTOR RELAY |
| 223 | 1 | - | OPC | OIL PUMP CONTACTOR |
| 224 | 1 | - | OPS | OIL PRESSURE SWITCH |
| 225 | 1 | - | OPT | OIL PRESSURE TRANSDUCER |
| 226 | 1 | - | OST | OUTDOOR SUCTION THERMISTOR |
| 227 | 1 | - | PAC | PACKAGED AIR CONDITIONER |
| 228 | 1 | - | PIC | PRODUCT INTEGRATED CONTROL |
| 229 | 1 | - | PCB | POWER EXHAUST CIRCUIT BREAKER |
| 230 | 1 | - | PCB | PRINTED CIRCUIT BOARD |
| 231 | 1 | - | PE | POWER EXHAUST |
| 232 | 1 | - | PEC | POWER EXHAUST CONTACTOR |
| 233 | 1 | - | PEDM | POWER EXHAUST DAMPER MOTOR |
| 234 | 1 | - | PEM | POWER EXHAUST MOTOR |
| 235 | 1 | - | PL | PLUG ASSEMBLY |
| 235A | 1 | - | PMR | PHASE MONITOR RELAY |
| 236 | 1 | - | POT | POTENTIOMETER |
| 237 | 1 | - | PRI | PRIMARY |
| 238 | 1 | - | PRM | PHASE ROTATION MONITOR |
| 239 | 1 | - | PRS | PRESSURE SWITCH |
| 240 | 1 | - | P&S | POWER & SAFETY SWITCH (OUTSIDE OF BW9) |
| 241 | 1 | - | PS | POWER SUPPLY |
| 242 | 1 | - | PSI | POUNDS PER SQUARE INCH(PRESSURE) |
| 243 | 1 | - | PSIO | PROCESSOR SENSOR INPUT/OUTPUT |
| 244 | 1 | - | PSN | PRIOR OR PREVIOUS SERIAL NUMBER |
| 244A | 1 | - | PT | PRESSURE TRANSDUCER |
| 245 | 1 | - | PTAC | PACKAGED TERMINAL AIR CONDITIONER |
| 246 | 1 | - | PW | PART WIND START |
| 247 | 1 | - | PWR | POWER |
| 248 | 1 | - | QT | QUADRUPLE TERMINAL |
| 249 | 1 | - | R | RELAY |
| 250 | 1 | - | REPLUNIT | REPLACE UNIT |
| 251 | 1 | - | RAC | ROOM AIR CONDITIONER |
| 252 | 1 | - | RAT | RETURN AIR THERMISTER |
| 253 | 1 | - | RB | RESET BUTTON |
| 254 | 1 | - | RBPL | RELAY BOARD PLUG ASSEMBLY |
| 255 | 1 | - | RCB | ROOFTOP CONTROL BOARD |
| 256 | 1 | - | RDV | REHEAT DISCHARGE VALVE |
| 257 | 1 | - | REF | REFERENCE(FOR REFERENCE ONLY): Not a salable part |
| 258 | 1 | - | RES | RESISTOR |
| 259 | 1 | - | RF | RETURN FAN |
| 260 | 1 | - | RLV | REHEAT LIQUID VALVE |
| 261 | 1 | - | RS | ROLL OUT SWITCH |
| 262 | 1 | - | RTPF | ROUND TUBE PLATE FIN COIL |
| 263 | 1 | - | RVS | REVERSING VALVE SOLENOID |
| 264 | 1 | - | S | SHORTING |
| 265 | 1 | - | SAT | SATURATED AIR THERMISTOR |
| 266 | 1 | - | SCB | SCREW COMPRESSOR BOARD |
| 267 | 1 | - | SCB | SPEED CONTROL BYPASS |
| 268 | 1 | - | SCOU | SUCTION CUT OFF UNLOADING |
| 269 | 1 | - | SCCR | SHORT CIRCUIT CURRENT RATING(INTERRUPT) |
| 270 | 1 | - | SCT | SATURATED CONDENSING TEMPERATURE |
| 271 | 1 | - | SEC | SECONDARY |
| 272 | 1 | - | SGC | STAGED GAS CONTROLLER |

Model/Sales Package: ABBREVIATIONS



| Itm# | Qty | Rec | Part Number | Description |
|------|-----|-----|-------------|--|
| 273 | 1 | - | SGT | SUCTION GAS THERMISTOR |
| 274 | 1 | - | SIO | STANDARD INPUT/OUTPUT MODULE |
| 275 | 1 | - | SN | SENSOR |
| 276 | 1 | - | SN | SERIAL NUMBER |
| 277 | 1 | - | SPP | SMALL PACKAGE PRODUCT;TYPICALLY 2-5 TON |
| 278 | 1 | - | SPT | SUCTION PRESSURE TRANSDUCER |
| 279 | 1 | - | SPT | SPACE TEMPERATURE SENSOR |
| 280 | 1 | - | SPTO | SPACE TEMPERATURE OFFSET |
| 281 | 1 | - | SRT | SMALL ROOFTOP UNIT;TYPICALLY 3-12.5 TON |
| 282 | 1 | - | SSN | START OR SUBSEQUENT SERIAL NUMBER |
| 282A | 1 | - | SSP | SATURATED SUCTION PRESSURE |
| 283 | 1 | - | SST | SATURATED SUCTION PRESSURE TRANSDUCER |
| 284 | 1 | - | SSV | SUBCOOL SOLENOID VALVE |
| 285 | 1 | - | STDU | STANDARD TIER DISPLAY UNIT |
| 286 | 1 | - | SVR | SOLENOID VALVE RELAY |
| 287 | 1 | - | SW | SWITCH |
| 288 | 1 | - | T | THERMISTOR |
| 289 | 1 | - | TB | TERMINAL BLOCK |
| 290 | 1 | - | TC | THERMOSTAT COOLING |
| 291 | 1 | - | TV | THROTTLING VALVE |
| 292 | 1 | - | TDR | TIME DELAY RELAY: note: delays opening or closing during startup or stoppage. |
| 293 | 1 | - | TGD | TIMEGUARD |
| 294 | 1 | - | TH | THERMOSTAT HEATING |
| 295 | 1 | - | TEMP | TEMPERATURE |
| 296 | 1 | - | TRAN | TRANSFORMER |
| 296A | 1 | - | T-STAT | THERMOSTAT |
| 297 | 1 | - | TXV | THERMO EXPANSION VALVE: note: operates from a thermostatic actuator |
| 298 | 1 | - | U | UNLOADER SOLENOID FOR COMPRESSOR |
| 299 | 1 | - | UC | UNLOADER COIL |
| 299A | 1 | - | UCB | UNIT CONTROL BOARD |
| 300 | 1 | - | UPC | UNIVERSAL PROTOCOL CONVERTER |
| 301 | 1 | - | UR | UNLOADER RELAY |
| 302 | 1 | - | V | VOLTAGE |
| 303 | 1 | - | VAC | VOLTS ALTERNATING CURRENT |
| 304 | 1 | - | VDC | VOLTS DIRECT CURRENT |
| 305 | 1 | - | VAV | VARIABLE AIR VOLUME: note: air flow delevary at variable CFM. |
| 306 | 1 | - | VFD | VARIABLE FREQUENCY DRIVE |
| 307 | 1 | - | VPAC | VERTICAL PACKAGED AIR CONDITIONER |
| 308 | 1 | - | VRF | VARIABLE REFRIGERANT FLOW |
| 308A | 1 | - | WSHP | WATER SOURCE HEAT PUMP |
| 309 | 1 | - | XL | ACROSS THE LINE START |
| 310 | 1 | - | YAC | YEAR ROUND AIR CONDITIONER |
| 311 | 1 | - | TFJ | EST FOR JERRY |
| 312 | 1 | - | TPN | TEST PART NUMBERS |