



Wiring changes from HK32EA001/007 board to HK32EA003/008 (Quiet Shift) board

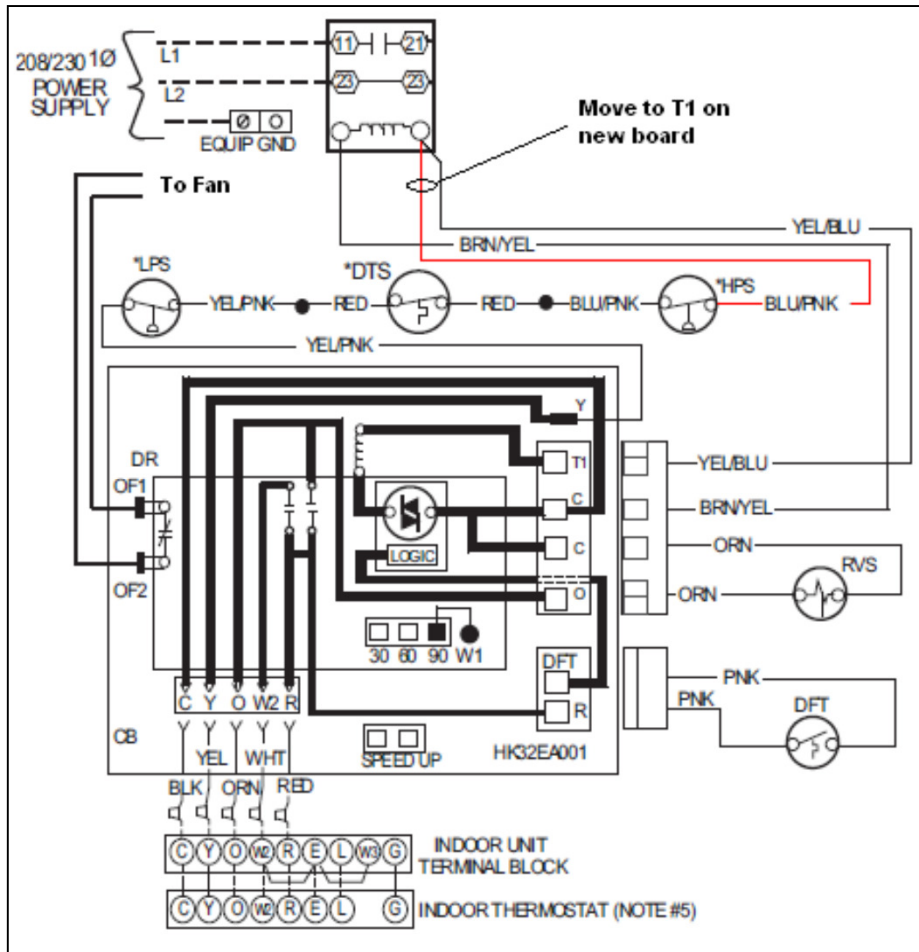

Original Board - Take BLU/PNK wire off of compressor contactor coil stake-on and move to T1 on the new board.

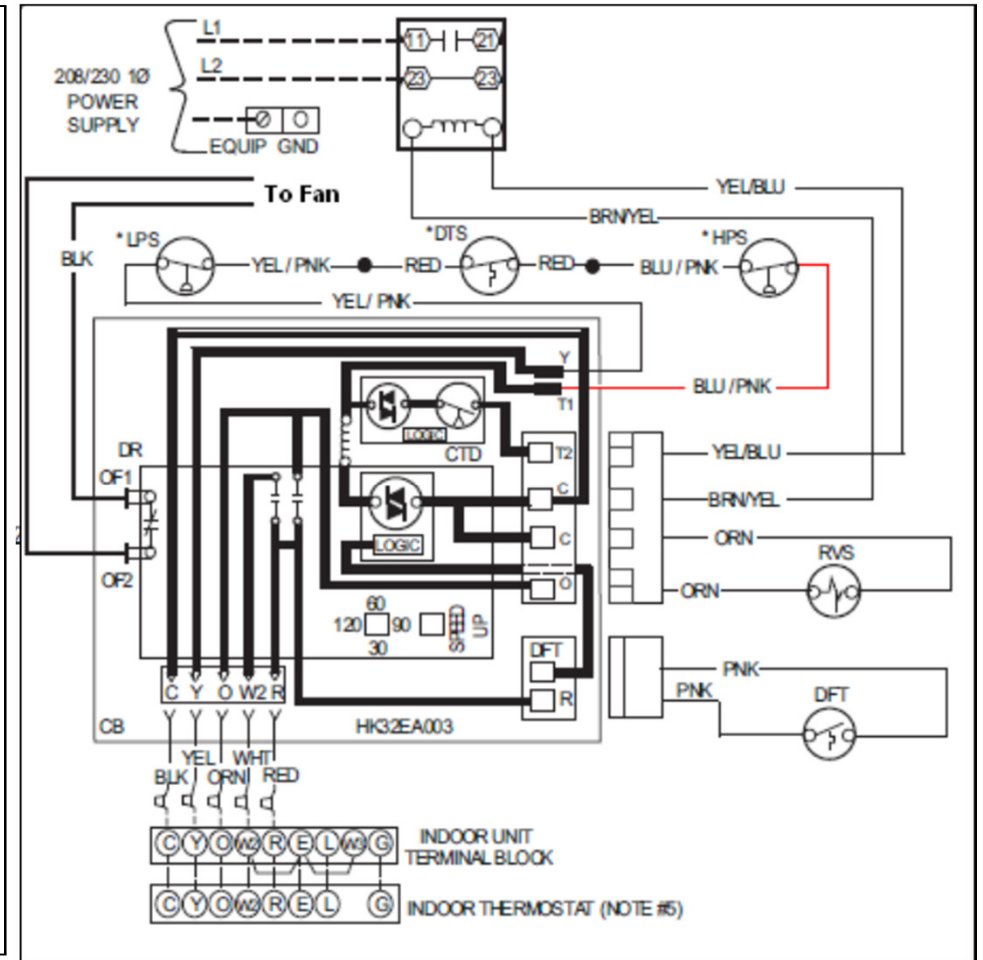

New Board – Note BLU/PNK wire has been moved from compressor contactor coil to T1 on the new board.